


Dove “Deaf Alert” Fire Alarm Transmitter Installation

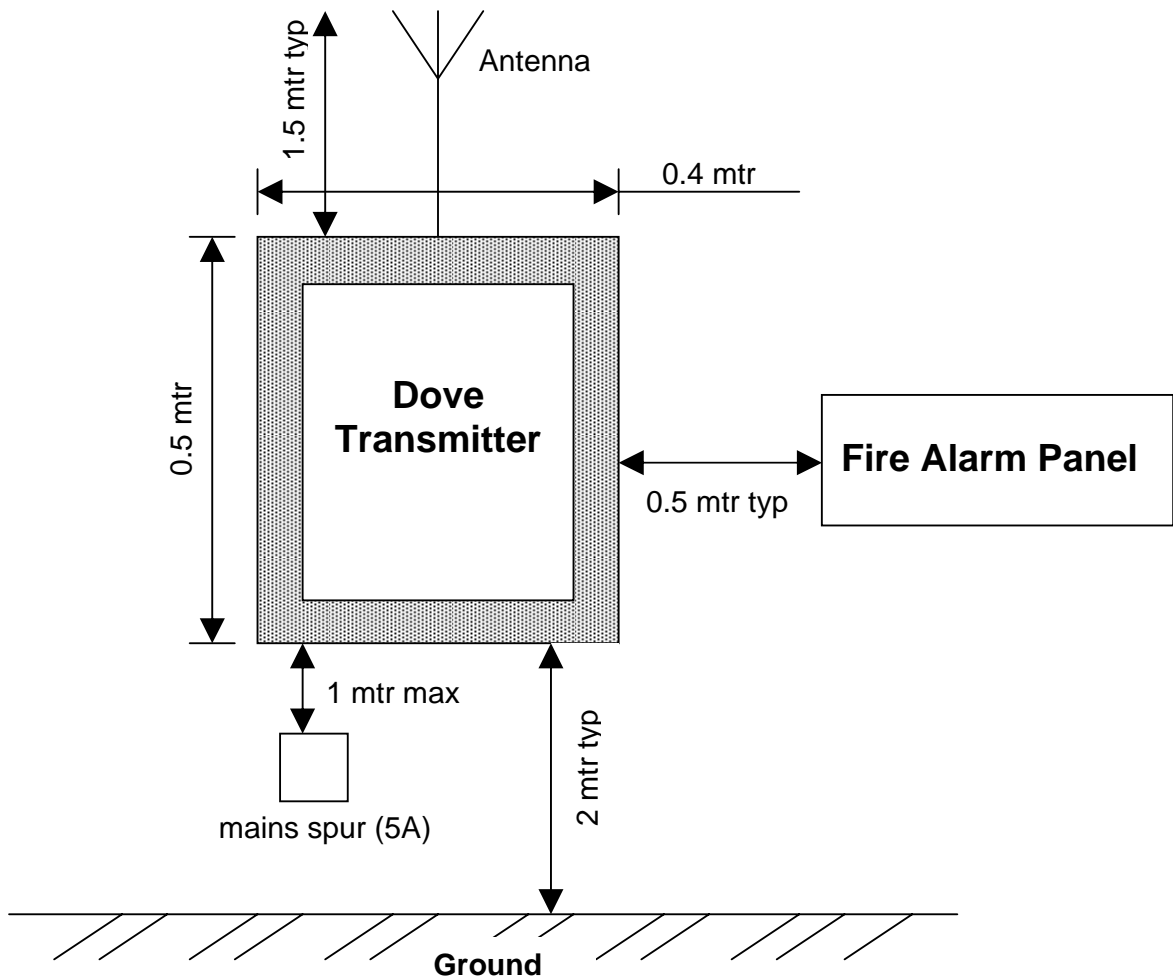

The facilities required are as follows:

- 5 Amp fused spur (not socket) located within 1 metre of the transmitter. The location of the transmitter is determined with yourselves at the time of the site survey.
Mains power consumption : 100mA max.
- Normally closed, voltage free output for the fire alarm panel, this is to be wired by yourselves to the proposed location of the transmitter. This must open on alarm and remain open until the system is reset.
- The aerial is located above the transmitter, as agreed on the site survey. Depending on aerial requirements this can protrude up to 1 metre.
- **Note:** On large sites where a power amplifier is required then 2 fused spur outlets will be required and double the wall space.

ANY PROBLEMS PLEASE CONTACT DOVE ON (01905) 353153.